

DISCatcher[®] SPORT Disc Golf Target

PARTS LIST

one base
one basket
one chain support
with chain assembly

one short (22") pole
one long (29") pole
five screws

Just 5 parts and 4 easy steps.

ASSEMBLY INSTRUCTIONS


STEP 1. Put the target base on the ground (outside ring down) and insert the longer taper of the 22" (short) pole into its sleeve, insert and tighten two base screws against the pole.

STEP 2. Slide the basket, open end up, onto the short pole. Insert and tighten the bottom basket screw against the pole. Disregard hole in pole, this hole is part of the manufacturing process.

STEP 3. Insert the 29" (long) pole into the top end of the basket sleeve. Insert and tighten the upper basket screw against the pole.

STEP 4. Lift the ring of the chain assembly over the top end of the 29" pole. Lower the chain support until it rests on the pole. Insert and tighten the chain support screw against the pole. Disregard hole in pole, this hole is part of the manufacturing process.

This target is made for indoor or outdoor use. Year round exposure to the elements is not recommended.

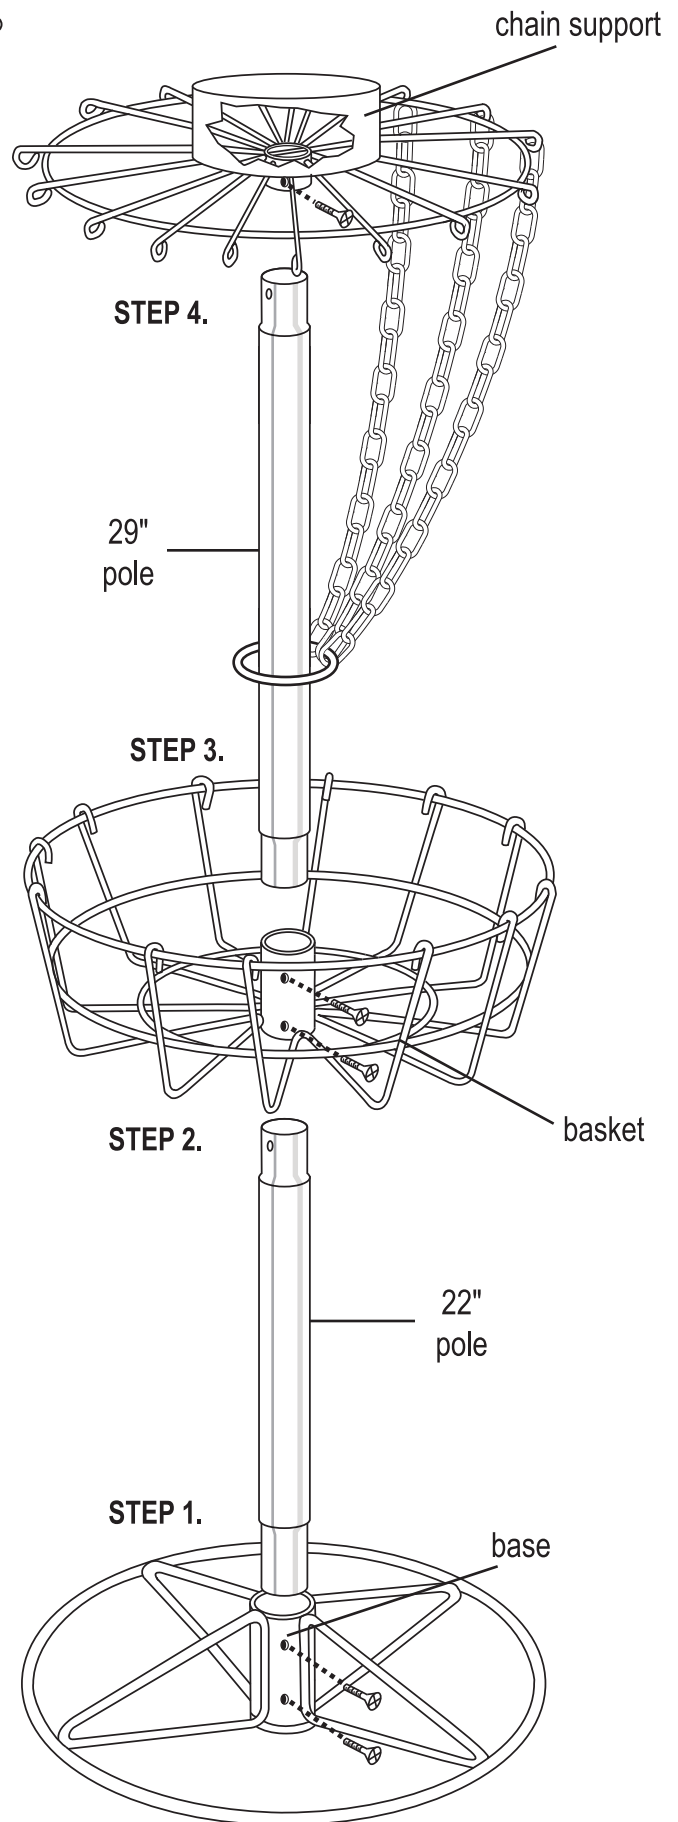

**Innova West (800) 408-8449 • info@innovadiscs.com
Innova East (800) 476-3968 • info@innovadiscgolf.com**