


Congratulations! You're ready to play disc golf wherever and whenever you want.

Assembly & Setup Instructions:

Connect canopy-section pole with basket-section pole, aligning push-button with locking hole. Make sure chains hang straight down untangled before securing sections. Open tripod base, remove cap from main pole, slip bottom of main pole into top of tripod base aligning push-button with locking hole. Raise basket, raise canopy, add flag. You're ready to play disc golf!

To collapse unit: Collapse canopy, collapse basket, remove flag. Slip cover over unit. Depress tripod pushbutton, pull covered assembly out of tripod and turn unit over so side pouch is upright. Place flag and tripod in pouch, tighten drawstring, replace end cap. You're completely portable!

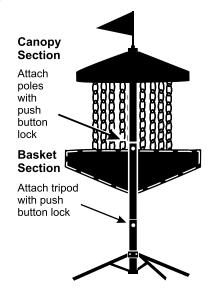

Did you know?...

...there are over 3000 Disc Golf courses around the world?



Search for one near you at discgolfu.com

Innova West Coast 11077 Arrow Route Rancho Cucamonga, CA 91730 (800) 408-8449 www.innovadiscs.com ...the distance world record for a flying disc is 820 feet?



Christian Sandstrom set the World Record in 2002 with an *Innova Valkyrie* distance driver. The record still stands today.

Skill-Shot Disc Golf Target licensed by:



...there are over 2000 disc golf tournaments around the world each year?



The **Professional Disc Golf Association** has over 40000 members, and manages both amateur and professional disc golf tournaments. Become a member at **PDGA.com**

Innova East Coast 2850 Commerce Drive Rock Hill, SC 29730 (800) 476-3968

www.innovadiscs.com

Care & Cleaning for the Skill-Shot DGT

The CHING[®] Skill-Shot[™] is designed to be **WEATHER RESISTANT**, but it is **NOT WEATHER PROOF**. You should always keep the unit stored in a cool dry place, and avoid using it in damp or rainy conditions.

If necessary you may remove rust quickly with emery cloth and use WD-40, silicon spray, or other home use oil to keep the moving metal parts operating properly.

Machine wash fabric skins in regular cycle using cold water and mild detergent. Tumble or air-dry. <u>Do not use 'heated' washer or dryer settings</u>.

The Skill-Shot[™] is designed to handle normal use playing disc golf with heavy weight golf discs. That means it will catch an occasional 300 footer and countless rounds of typical approaches & putts, but it is not designed to withstand constant duress from aggressive putting practice or abuse from close range power shots. Be smart, respect your equipment and it will last for years.

One year warranty covers manufacturing defects only.

CAUTION: ALWAYS KEEP HEADS, HANDS, FINGERS, AND FEET CLEAR FROM MOVING PARTS.

ADULT ASSISTANCE MAY BE REQUIRED FOR SETUP AND/OR BREAKDOWN.

TO REMOVE and/or REPLACE SKINS

- **1)** Prepare a work area that will accommodate the target in the 'setup' position.
- 2) Partially collapse the basket to remove fabric tension.
- **3)** Individually remove the looped endpoints at each basket rib.
- 4) Slide the skin off the center post, removing the tri-pod as necessary to take the basket skin off completely.
- ****** Repeat above steps for canopy section.
- ******* Attach skins by reversing the steps above.

