

DISCcatcher[®] **TRAVELER** **PORTABLE DISC GOLF TARGET**




Set Up

1. Stand up the DISCatcher Traveler[®] and pull the legs away from the center.
2. Lift mesh/chain and pull up the center pole while pushing down on the top of the leg assembly until it clicks into place.

Pull Up Center Pole

Push Down Leg Assembly

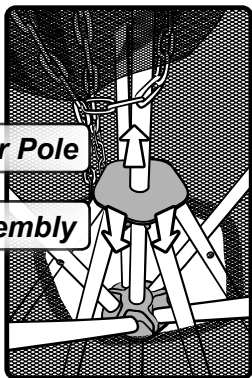

Take Down

1. Pull the release pin located under basket area.
2. Lift mesh/chain and push down on the center pole.

Pull Release Pin

